

RT Box

DEMO MODEL

Railway Traction Application Demo

Realtime simulation of a traction system for railway application on RT Box 2, 3 or 4 with FlexArray solver

Last updated in RT Box Target Support Package 4.1.1

www.plexim.com

- Request a PLECS and PLECS Coder trial license
- Get the latest RT Box Target Support Package
- Check the PLECS and RT Box TSP documentation

1 Overview

This demo showcases the computational power of the RT Box in case of a real-time simulation of a large PLECS model with many complex components. The chosen model includes converters, machines, transformers, and, as an example of a non-ideal component - a vacuum circuit breaker (VCB). Such large and complex models are challenging to simulate in real-time due to limitations of the computational power per CPU core. The proposed solution is to utilize the powerful FPGA-based FlexArray solver on the RT Box, instead of using multiple CPU cores where a cumbersome model splitting is needed. The chosen discretization step sizes are shown in Tab. 1.

The model used for this demo comprises the traction system of a moving rail car fed by a catenary. The focus of the simulation lies on the moment after a short blackout due to the train transferring from one power supply line to another. During the blackout, the VCB activates. The simulation will show the effect of the non-ideal oscillations on the operation of the system in the moments after the blackout.

Table 1: Discretization step size and FlexArray step size of the demo model on RT Box 2

	Core 0: step size	Core 1: step size	FlexArray step size
RT Box 2, 3 or 4	3.3 μs	3.3 μs	1.1 μs

1.1 Requirements

To run this demo model, the following items are needed (available at www.plexim.com[1]):

- One PLECS RT Box 2, 3 or 4[2] and one PLECS Coder[3] license
- One 37 pin Sub-D cable to connect the digital I/Os of the box front-to-front
- The RT Box Target Support Package[4]
- Follow the step-by-step instructions on configuring PLECS and the RT Box in the Quick Start guide of the RT Box User Manual[5].

Note

This model contains model initialization commands that are accessible from:
PLECS Standalone: the menu **Simulation > Simulation Parameters... > Initializations**
PLECS Blockset: right click in the **Simulink model window > Model Properties > Callbacks > InitFcn***

1.2 Limitations

The focus of this model is to showcase the RT Box capabilities. There is no intention of providing an actual, real-world implementation. Therefore, the model comprises only the main components of a railway traction system. The values chosen are also unverified and may differ from actual implementations.

2 Model

The top level schematic of the demo model is depicted in Fig. 1. The PWM generation and the power circuit run on the same RT Box. The “Railway Traction System” subsystem has to be configured as **atomic** and enabled for **code generation** by right-clicking on the subsystem and choosing **Subsystem + Execution settings...**.

[1] http://www.plexim.com
[2] https://www.plexim.com/products/rt_box
[3] https://www.plexim.com/products/plecs/plecs_coder
[4] https://www.plexim.com/download/rt_box
[5] https://www.plexim.com/sites/default/files/rtboxmanual.pdf

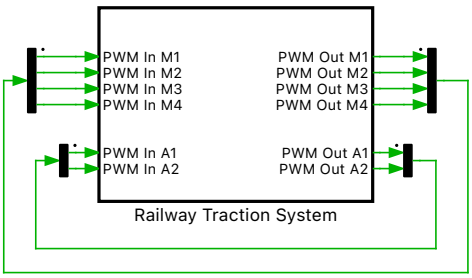


Fig. 1: Top level schematic of the railway traction system

2.1 Plant

Fig. 2 shows the circuit model of the plant. The plant comprises parts of an electric locomotive, including the overhead supply, traction unit, and auxiliary applications. A line-frequency transformer links the input stage with the traction and the auxiliary stages by primary, secondary and tertiary windings. In the model, the electrical circuit is connected directly without any splitting. An Electrical Model Setting block configured for FlexArray is connected to the lower rail of the input stage.

One reason that four motor drives, one three-phase inverter and one DC/DC Buck converter are included in this demo application is that a total of 32 PWM gate signals are needed, which utilize all the Digital I/O channels of an RT Box 2.

Input stage

The input stage includes the overhead supply and a single-phase transformer with primary, secondary and tertiary windings. The secondary and tertiary windings are connected to single-phase uncontrolled rectifier bridges and DC-links, in this case capacitors.

The VCB model is explained in details in section “Vacuum circuit breaker (VCB)”. Its implementation is done on a system level, and it is a reaction dependent model.

The grid used in this case provides 15 kV at $16\frac{2}{3}$ Hz, like in large parts of Germany, Switzerland, and Austria [1].

Traction stage

The traction stage includes four sets of inverters driving the induction machines. The inverters take the power from the DC-link. In this demo model, all four traction motors have identical parameters. These four motors provide in total approximately 1 MW power.

Further, it is not defined, whether the traction motors drive a wheelset or a single wheel. The model only shows as many motor drives as possible on an RT Box 2 due to its digital input channel count. The user can pick their implementation and apply it as needed.

Auxiliary stage

For the sake of completion and for increasing the load on the RT Box 2, 3 or 4, the model also includes the auxiliary stage. This allows, for example, to model all load elements that act on the DC-link. It also allows to show the effect of the blackout on the auxiliary components. The auxiliary stage takes power from the DC-link connected to the trafo tertiary winding.

The auxiliary stage consists of a three-phase inverter and a DC/DC Buck converter. The three-phase inverter is connected via an LC filter to an RL load. The Buck converter is loaded with a voltage source, which models the battery on the train. The auxiliary stage provides approximately 220 kW power.

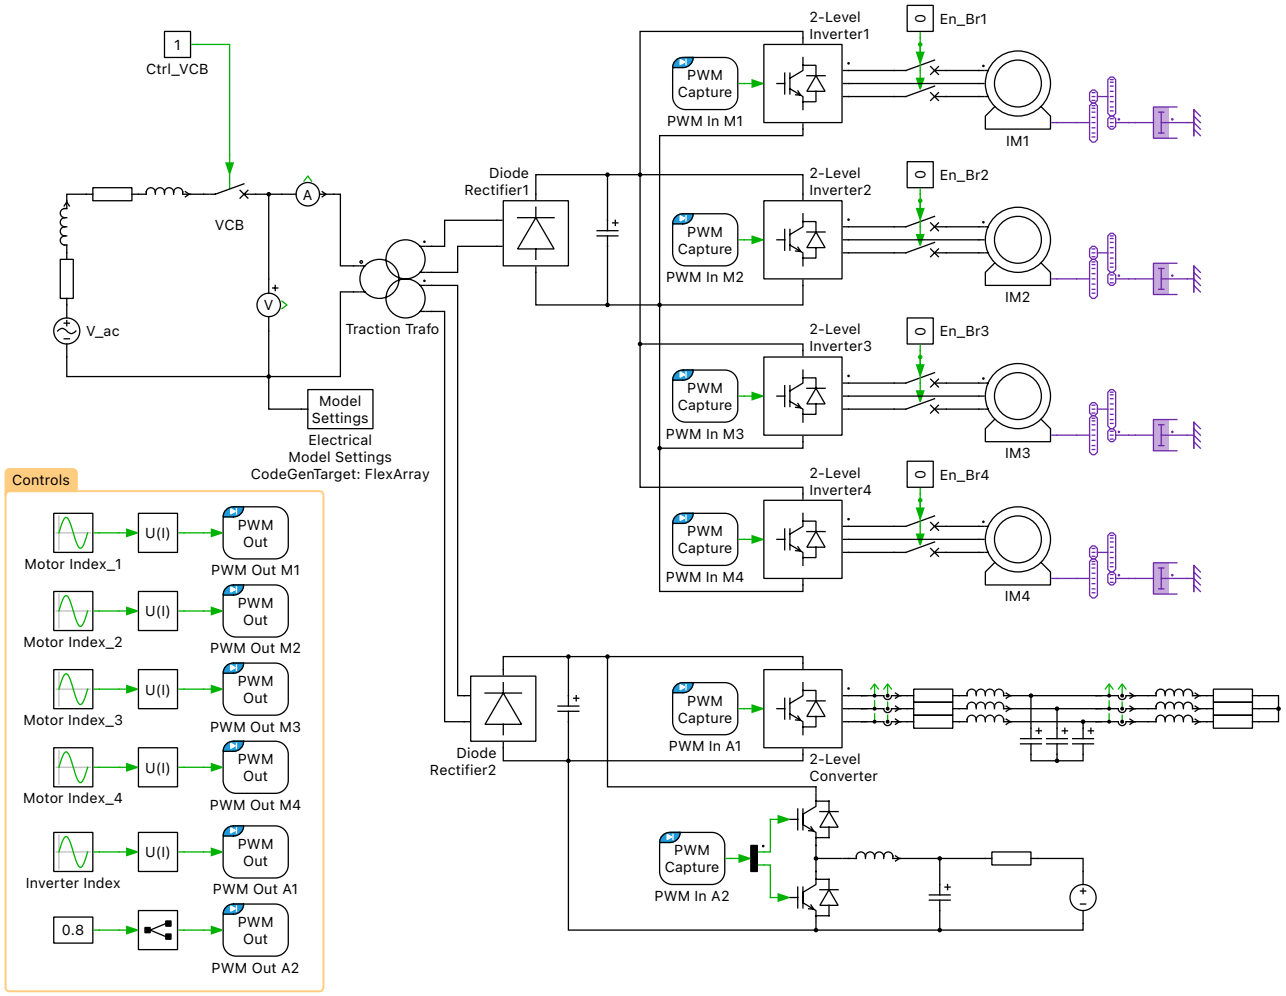


Fig. 2: Circuit schematic of the railway traction system

2.2 Controls

The system operates in open-loop. As the focus of the simulation lies on the VCB transients that propagate through the system, a closed loop is not necessary and would take away unnecessary computational power of the RT Box. For HIL testing, closed-loop controls are usually implemented on an external controller connected to the RT Box.

In this demo, the PWM generation is executed in the same box using the PWM Out block. To offload the main CPU core (Core 0), the PWM generatinon is circled with a Task Frame called “Controls”, and it is assign onto another CPU core (Core 1). Those PWM signals generated at the box’s digital outputs are then fed back to the digital inputs by using a physical loop-back cable. These PWM signals are sampled into the box with the PWM Capture block.

In the traction stage, the three-phase inverter driving its induction machine is controlled with three-phase PWM modulation indices, varying in a sinusoidal fashion.

In the auxiliary stage, the three-phase inverter with the RL load is also controlled with sinusoidal PWM modulation indices. The Buck converter operates with a fixed duty cycle.

2.3 Vacuum circuit breaker (VCB)

A circuit breaker that uses vacuum as a medium to extinct an arc is called a vacuum circuit breaker. In this type of circuit breaker, the fixed and moving contacts are enclosed in a permanently sealed vac-

uum interrupter. The arc gets extinct due to the separation of the contacts in high vacuum. High vacuum possesses extremely high dielectric strength. So, the vacuum circuit breaker can easily withstand medium voltage ranging from 11 kV to 33 kV.

Construction of the VCB

The vacuum circuit breaker comprises a vapour condensation shield in the center-symmetrically arranged ceramic insulating envelope. Their construction is mainly divided into three parts, i.e. a fixed contact, a moving contact and a shield, which are placed inside the arc interrupting chamber. Fig. 3 depicts the sectional view of a VCB [2].

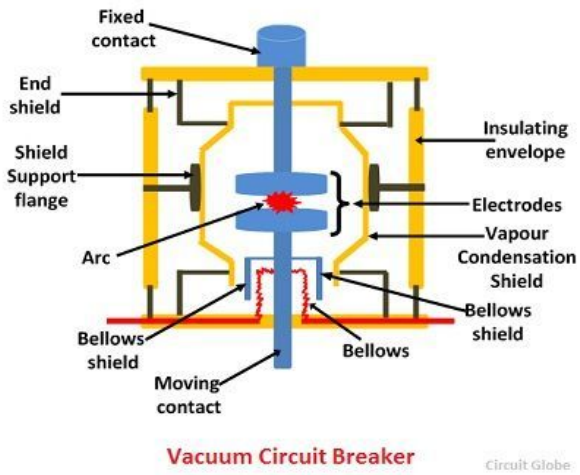


Fig. 3: Sectional view of the construction of a vacuum circuit breaker

Working principle of the VCB

When a fault occurs in the system, the moving contact is moved away from the fixed contact. As the contacts move apart an arc develops: When the contacts start to separate, they are still carrying current. So, the temperature of the contacts is high, which causes ionization. Due to the ionization, the space between the contacts is filled with vapour of positive ions. These ions are discharged from the material of the contacts.

The density of vapour depends on the current in the arc. Due to the decreasing value of the current the release rate of the vapour falls. After the current reaches zero and the vapour density around the contacts is reduced enough, the circuit breaker regains its full dielectric strength very quickly. This quick recovery is due to the absence of gas molecules, allowing the vaporized metal to diffuse rapidly. Hence, the arc does not restrike any more.

The recovery rate of the dielectric strength is represented by the variable in the field “Voltage rise slope during quenching” in the mask dialog of the VCB subsystem. In this VCB model it is chosen as 100 V/ms. The VCB maximum withstand voltage is set as 30 kV in the model.

Modeling of the VCB

The modeling of the VCB is implemented based on a PLECS Breaker component with extra control circuitry. The circuit schematic beneath the VCB mask is shown in Fig. 4. The control circuitry of this Breaker represents the main working principle explained above. The `Ctrl` Signal Inport receives a Boolean signal that controls the ON/OFF signal of the VCB.

The recovery of the dielectric strength is modeled with an Integrator with the slew rate as “voltage rise slope during quenching”. The integration action stops at the maximum withstand voltage.

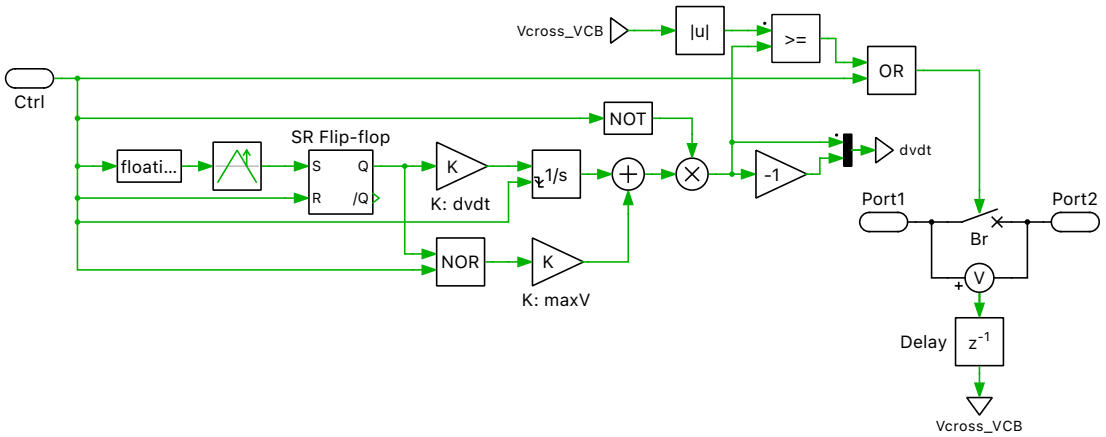


Fig. 4: Schematic of the VCB model under the mask

The NOR gate path ensures the maximum withstand voltage when the VCB is in static OFF state. Therefore, the output of the Product component models the dynamic breakdown voltage limit of the VCB.

The Relational Operator (in "greater or equal" configuration) models the scenario when the measured voltage across the VCB goes beyond the dynamic breakdown voltage limit, the VCB goes briefly back into ON state. It continues for several cycles of alternating between ON and OFF status, until finally the line current is successfully interrupted.

This behaviour is illustrated in an offline simulation in Fig. 5, with the VCB `Ctrl` signal going through OFF-ON-OFF status.

3 Simulation

This section describes the main operating scenario of the model. This model can run both in offline mode on a computer or in real-time mode on an PLECS RT Box 2, 3 or 4.

Please follow the instructions below to run in real-time mode on an RT Box:

- Connect the Digital In interface to the Digital Out interface of the RT Box, i.e. by using a 37 pin Sub-D cable as shown in Fig. 6 on p. 8.
- From the **System** tab of the **Coder options...** window, select the "Railway Traction System" and go to the **Scheduling** tab. Make sure the tasking mode is chosen as `multi-tasking`.
- Click **Build** to deploy the model onto the RT Box.
- Once the model is uploaded, from the **External Mode** tab, **Connect** to the RT Box and **Activate autotriggering**.

3.1 VCB on and motor breakers disrupted

In the initial status, the VCB is passing through normal current, i.e. `Ctrl_VCB` equals to `1`. Only the auxiliary stage is powered up, but the traction motors are not connected in the circuit yet. This represents the scenario when the train is stopped and lights are on. The train is ready to depart at the station.

Fig. 7 on p. 9 shows the voltage and current waveforms of the transformer primary side. Fig. 8 on p. 9 shows the nominal operating waveforms of the three-phase inverter at the auxiliary stage.

3.2 Engage the breakers connected to traction motors

Now we want to represent the scenario when the train starts running. Select the four Constant blocks (named `En_Br1`, `En_Br2`, `En_Br3` and `En_Br4`) at the same time and change them from `0` to `1`. This ac-

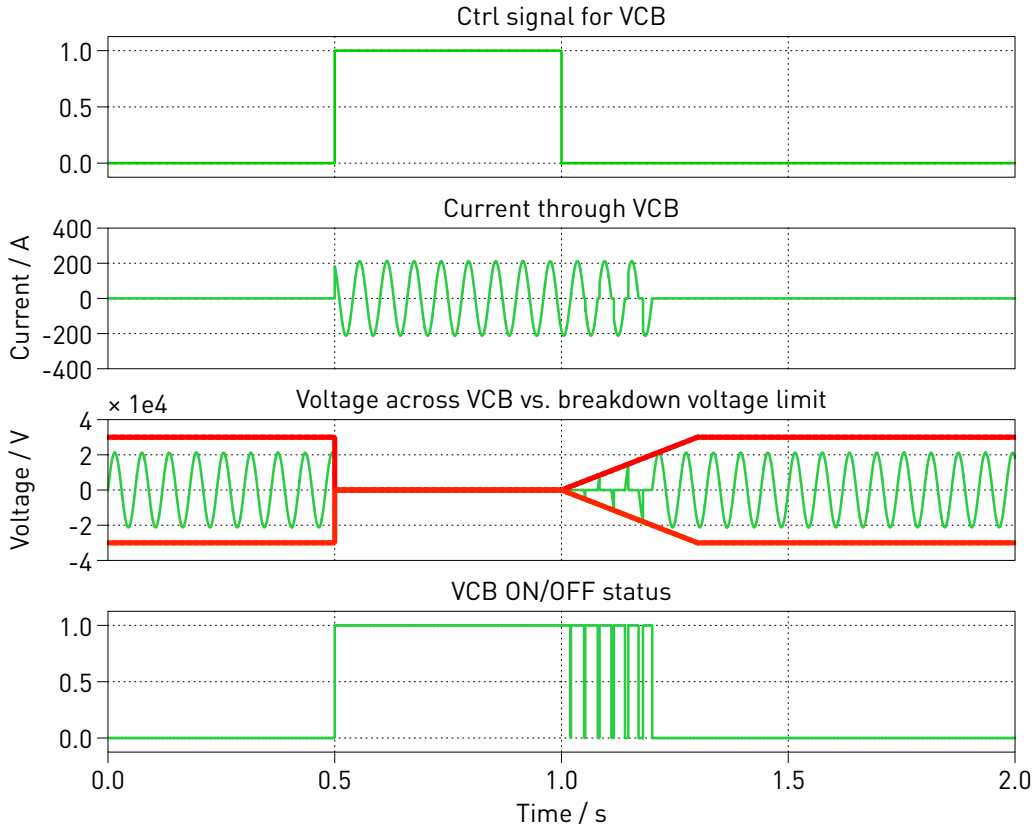


Fig. 5: Illustrative waveform of the VCB model under different control signal status

tion engages all four circuit breakers. Each circuit breaker is connected to one of the four motors. The train starts running when the four motors generate traction effort.

Fig. 9 on p. 10 shows the waveforms of the transformer primary side under nominal traction effort and auxiliary stage.

Fig. 10 on p. 10 shows the stator currents, rotor position and electrical torque of one traction motor under nominal traction effort.

3.3 Signal the VCB to break the current

We now want to represent the scenario when the train is going across a section insulator in the overhead lines. In reality, the grid supply will be disconnected from the traction trafo for a very short period of time. During this temporary blackout in the catenary, the VCB quenches the arc, causing non-linear disturbances on the voltage and current of the device. Here, we represent this event by giving a disenable signal to the VCB, changing the status of the VCB from ON to OFF. So, we change the Constant named `Ctrl_VCB` from 1 to 0. This signals the VCB to break the current.

Fig. 11 on p. 11 includes the trafo primary side voltage and current waveforms around the transition of the catenary power blackout. Distorted voltage and current can be observed due to the quenching effect of the VCB. As a result of the interrupted line's current, the two DC link voltages suffer from gradual drop (see Fig. 11 on p. 11).

As a result, this disturbance travels through the DC capacitors to the respective motor and auxiliary stages. In real practice, the auxiliary converters and motor drive inverters are always controlled in closed-loop fashion. The closed-loop control is used to combat this temporary dip in the DC link voltages. This way, the converters can continue delivering the desired power to the loads. This phenomenon is not the focus of this demo and is therefore not included.

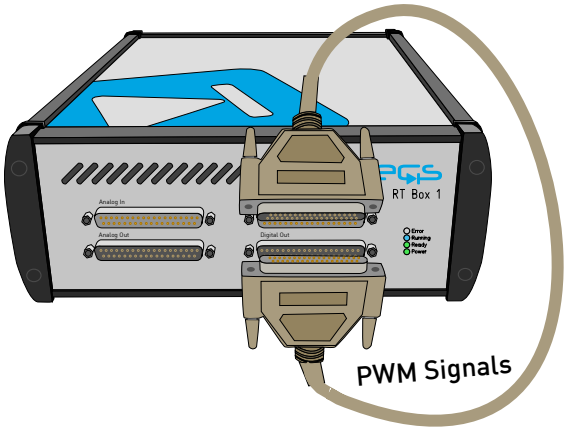


Fig. 6: Hardware configuration for the real-time operation of the demo model

Fig. 12 on p. 12 shows the detailed waveforms inside the VCB subsystem model at the same transition. Upon the disruption of the catenary supply voltage, every time the line current reaches 0 the VCB quenches the arc while the withstand voltage builds up. It continues for several cycles of alternating between ON and OFF status (approx. 200 ms), until finally the line current is successfully interrupted.

4 Conclusion

This demo model shows a generic railway traction system and demonstrates the current breaking behaviour of a VCB. The demo model shows a large traction system runnnig on the FlexArray solver of the RT Box with a fixed time step of $1.1\ \mu s$.

Using the FlexArray solver compared to the conventional model calculation on the CPU core, a smaller discretization step size can be applied, which improves frequency resolution and thereby increases the fidelity of the real-time simulation.

5 Bibliography

[1] “Open Railway Map”, [Online]. Available: https://www.openrailwaymap.org/?lang=null&lat=50.56928286558243 [Accessed: Oct. 26, 2023].

[2] “Vacuum Circuit Breaker”, [Online]. Available: https://circuitglobe.com/vacuum-circuit-breaker.html. [Accessed: Oct. 17, 2023].

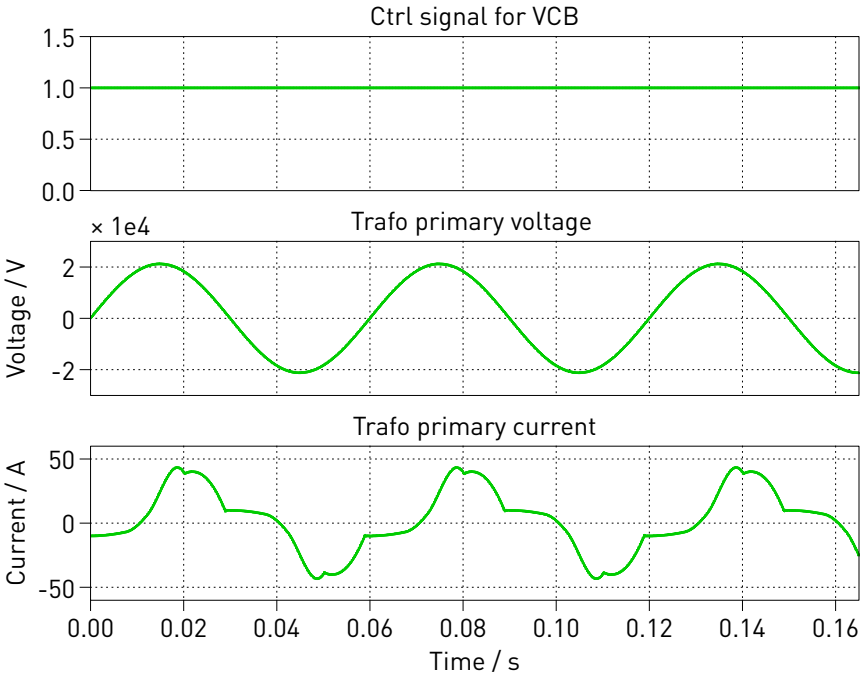


Fig. 7: Traction trafo primary side waveforms when the VCB is on but the motors are not connected yet

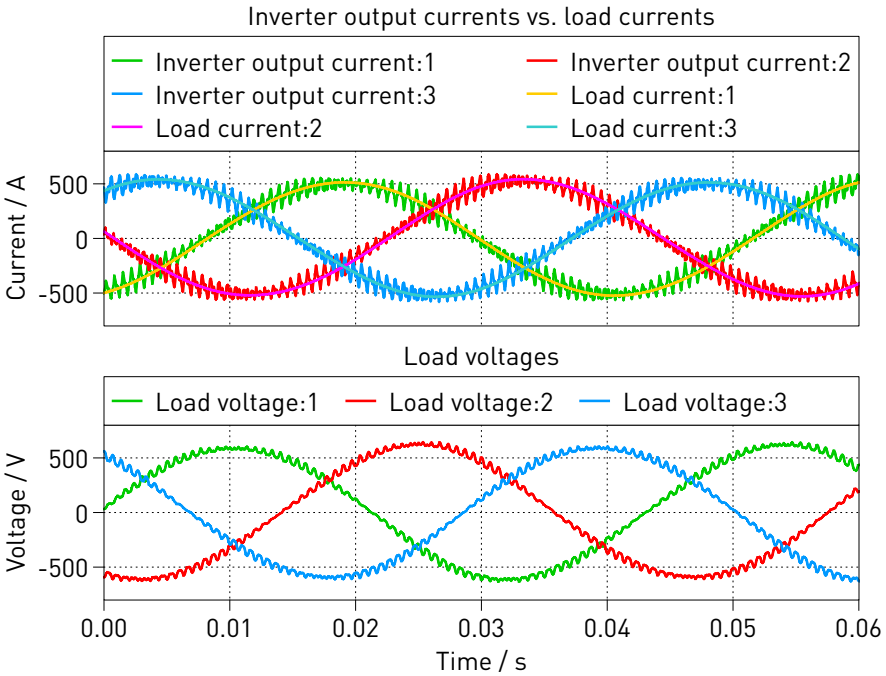


Fig. 8: Auxiliary stage three-phase inverter nominal operating waveforms

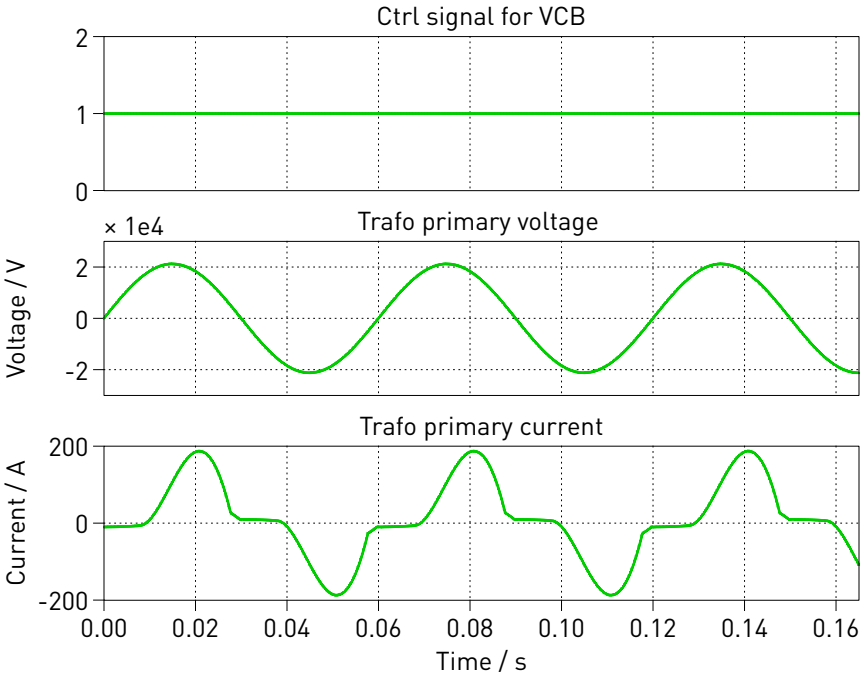


Fig. 9: Traction trafo primary side waveforms under nominal traction effort and auxiliary load

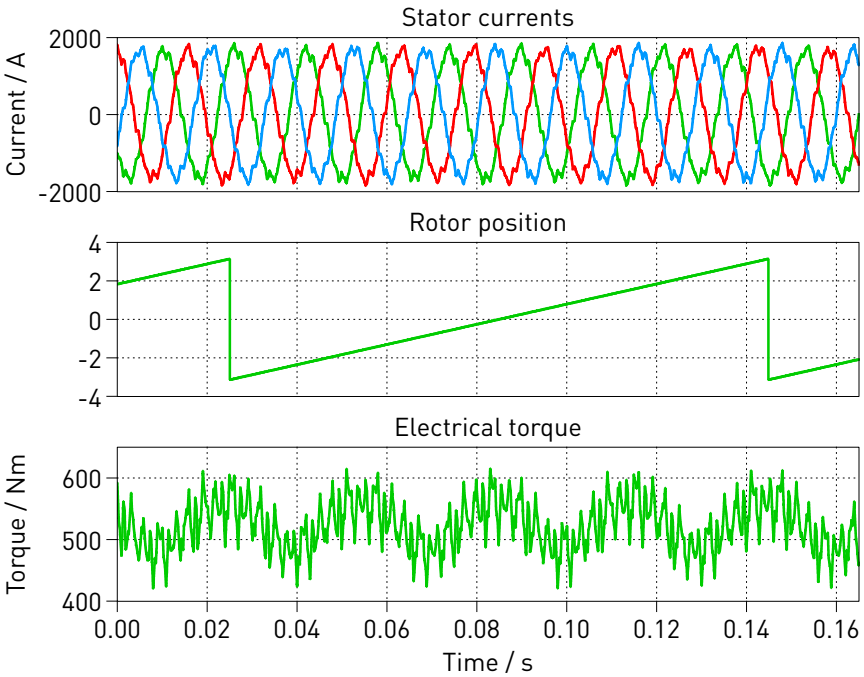


Fig. 10: Waveforms of one traction motor under nominal traction effort

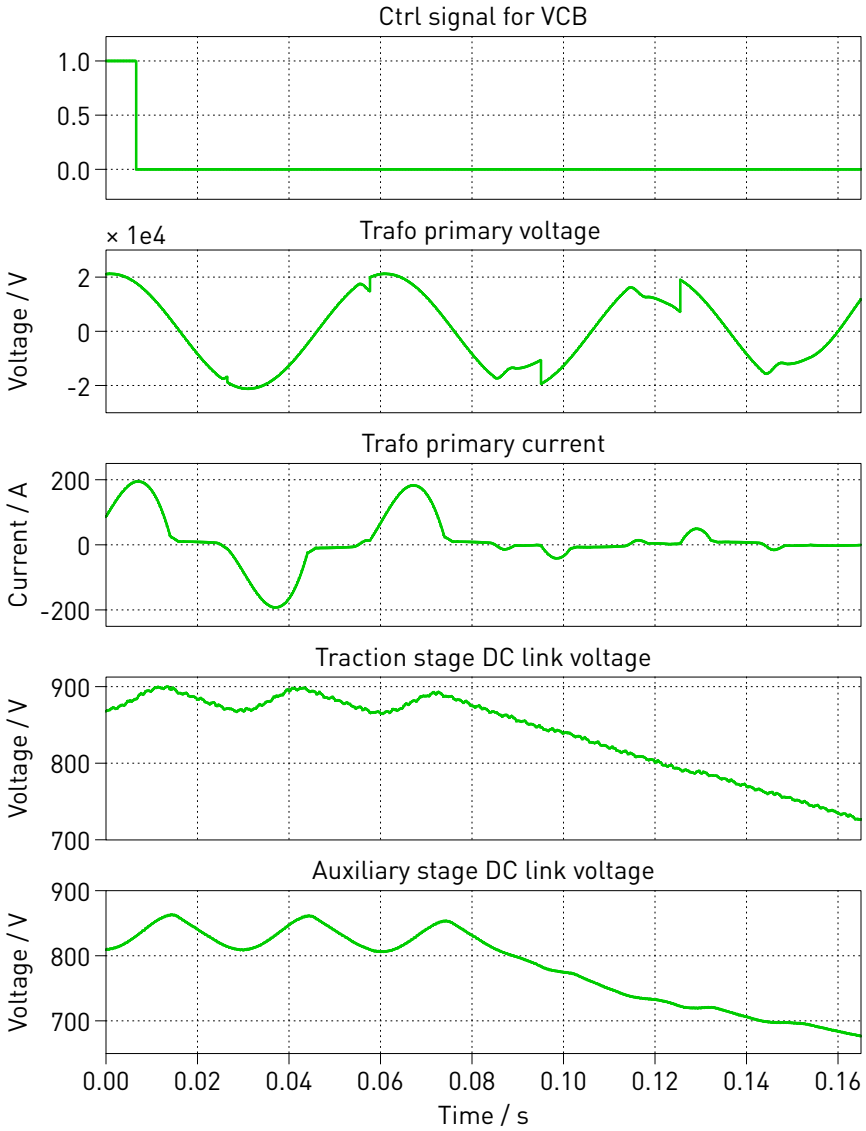


Fig. 11: Traction trafo primary side waveforms and DC link waveforms during the VCB turn-off transition

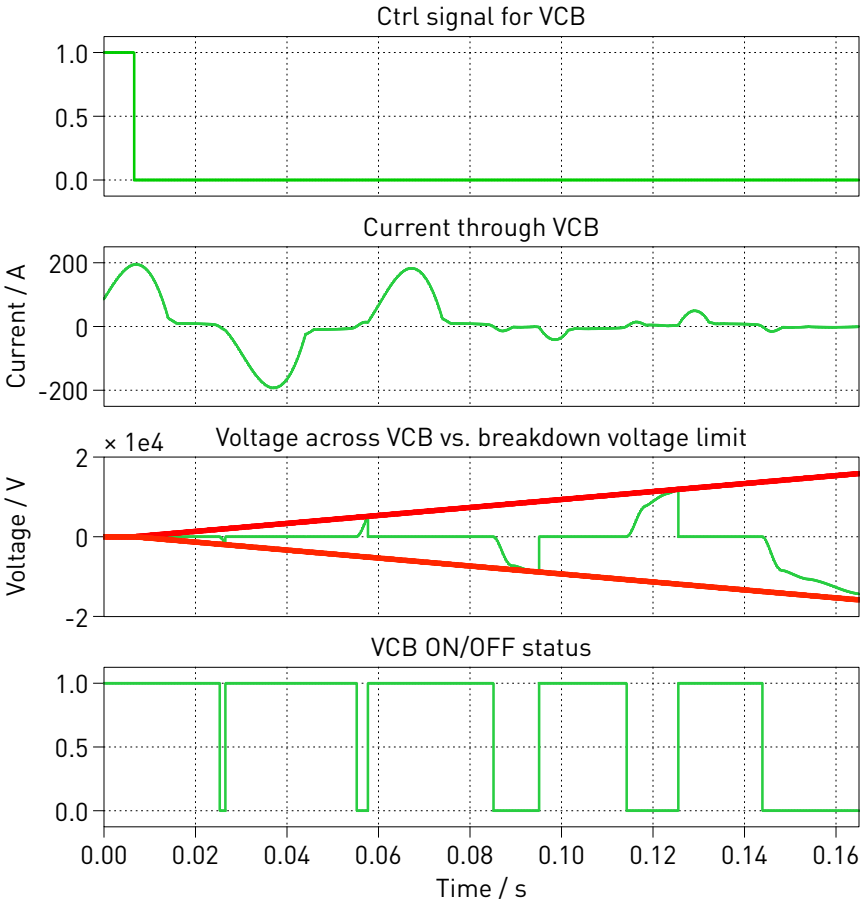


Fig. 12: Detailed waveforms inside the VCB during the VCB turn-off transition

Revision History:

RT Box TSP 3.0.1	First release
RT Box TSP 4.1.1	Update to use the FlexArray solver on the RT Box

How to Contact Plexim:

☎	+41 44 533 51 00	Phone
	+41 44 533 51 01	Fax
✉	Plexim GmbH Technoparkstrasse 1 8005 Zurich Switzerland	Mail
@	`info@plexim.com`	Email
	`https://www.plexim.com`	Web

RT Box Demo Model

© 2002–2026 by Plexim GmbH

The software PLECS described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from Plexim GmbH.

PLECS is a registered trademark of Plexim GmbH. MATLAB, Simulink and Simulink Coder are registered trademarks of The MathWorks, Inc. Other product or brand names are trademarks or registered trademarks of their respective holders.